


Cabana Bench Modified 6' - Surface Mount

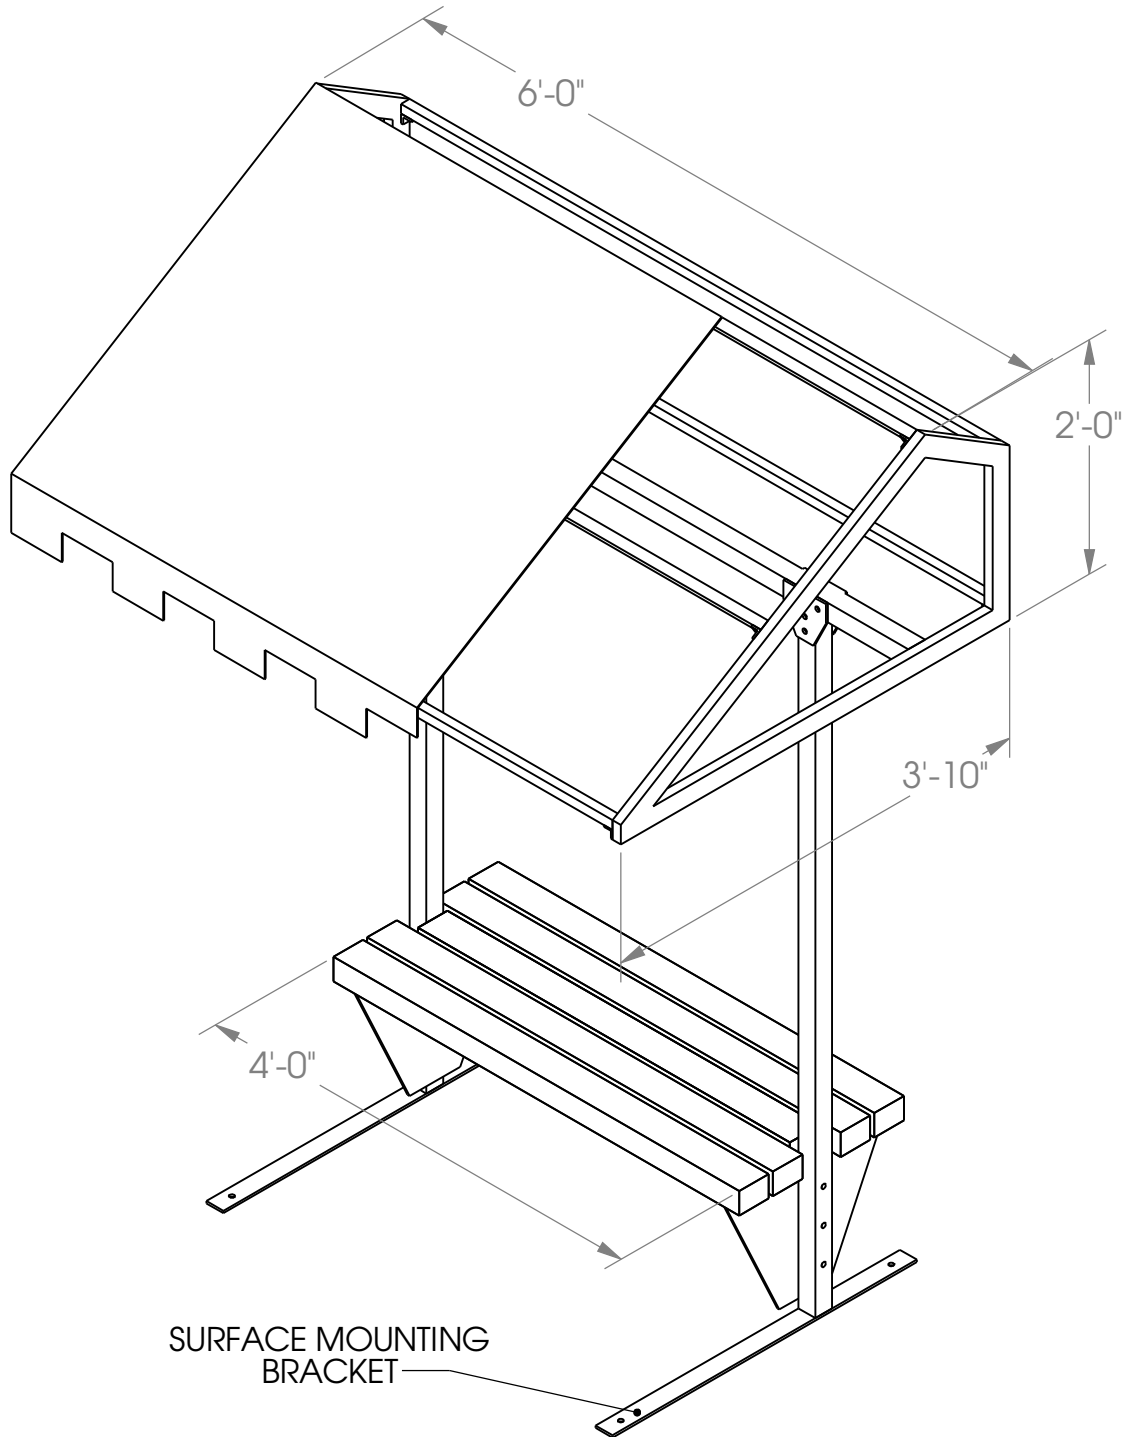

ISOMETRIC VIEW

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SUNTRENDS INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SUNTRENDS INC. IS
PROHIBITED.


SunTrends, Inc.

P.O. BOX 101057
DENVER, CO 80250
303-744-2647

SCALE 1:14

SHEET 1 OF 5

Cabana Bench Modified 6' - Surface Mount

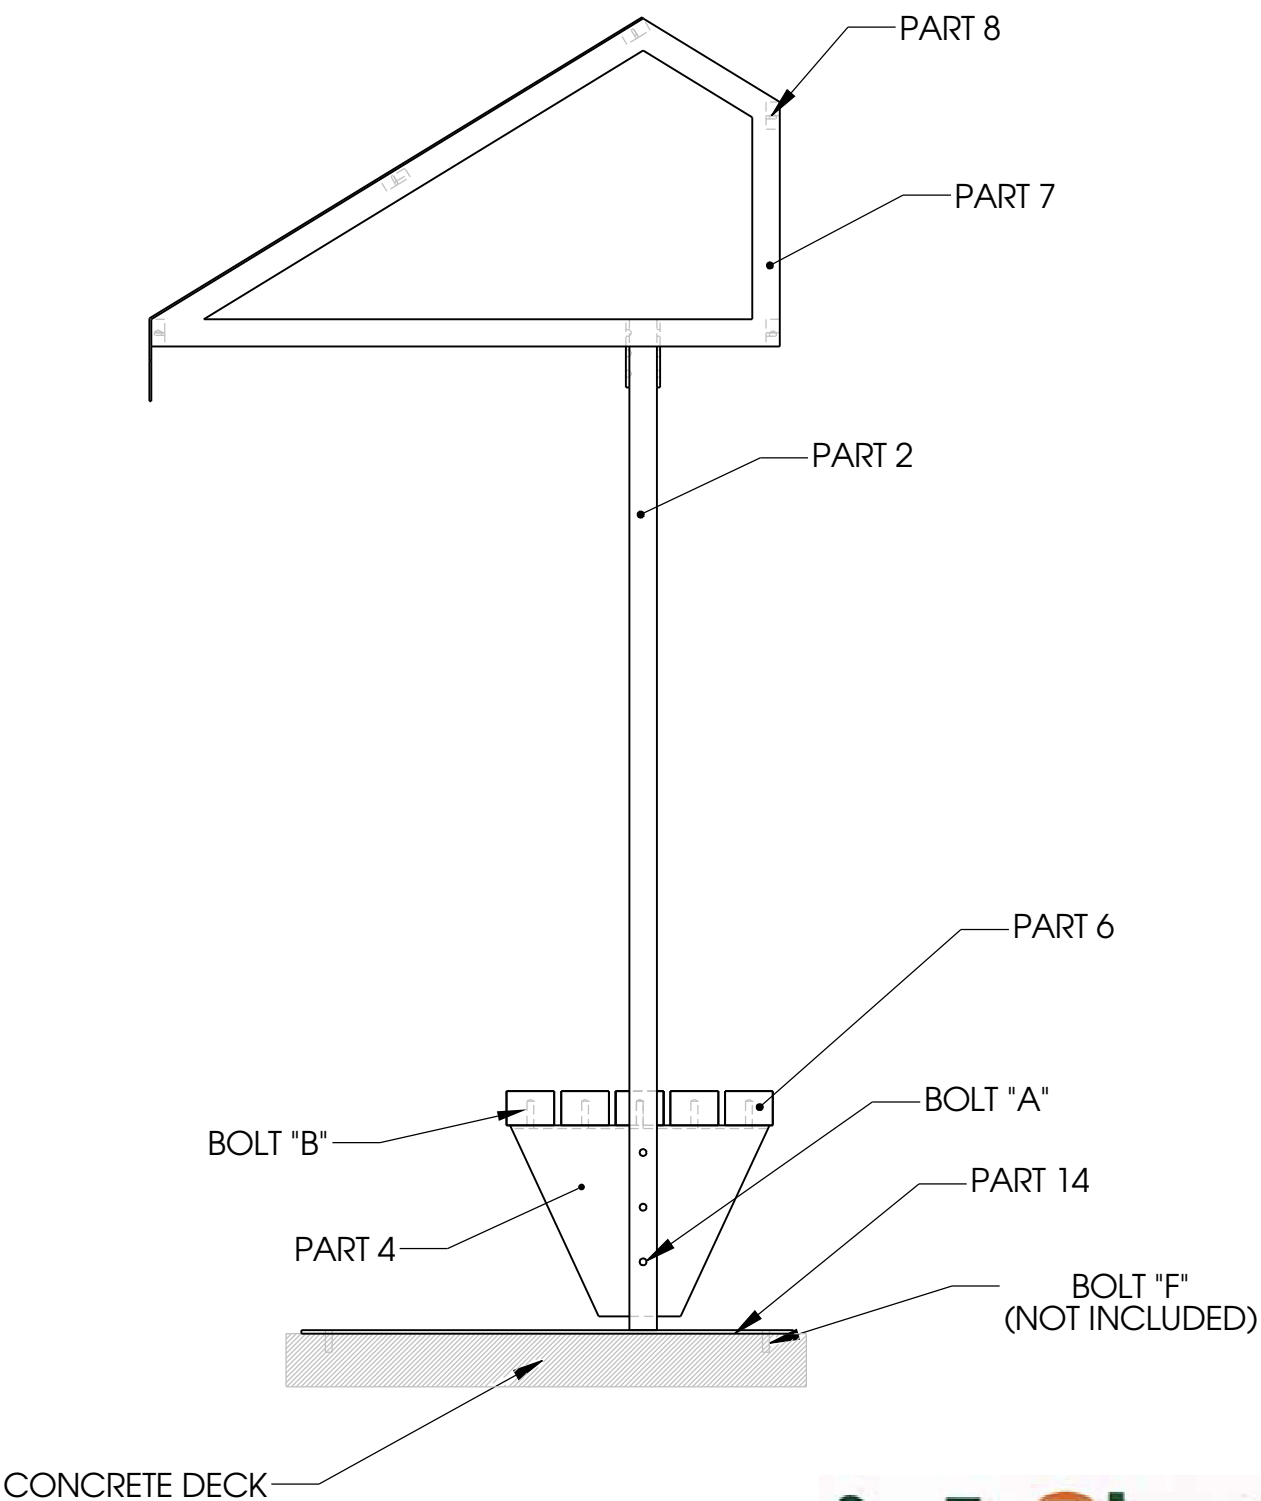

SIDE VIEW


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SUNTRENDS INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SUNTRENDS INC. IS
PROHIBITED.



P.O. BOX 101057
DENVER, CO 80250
303-744-2647

SCALE 1:14	SHEET 3 OF 5
------------	--------------

Cabana Bench Modified 6' - Surface Mount

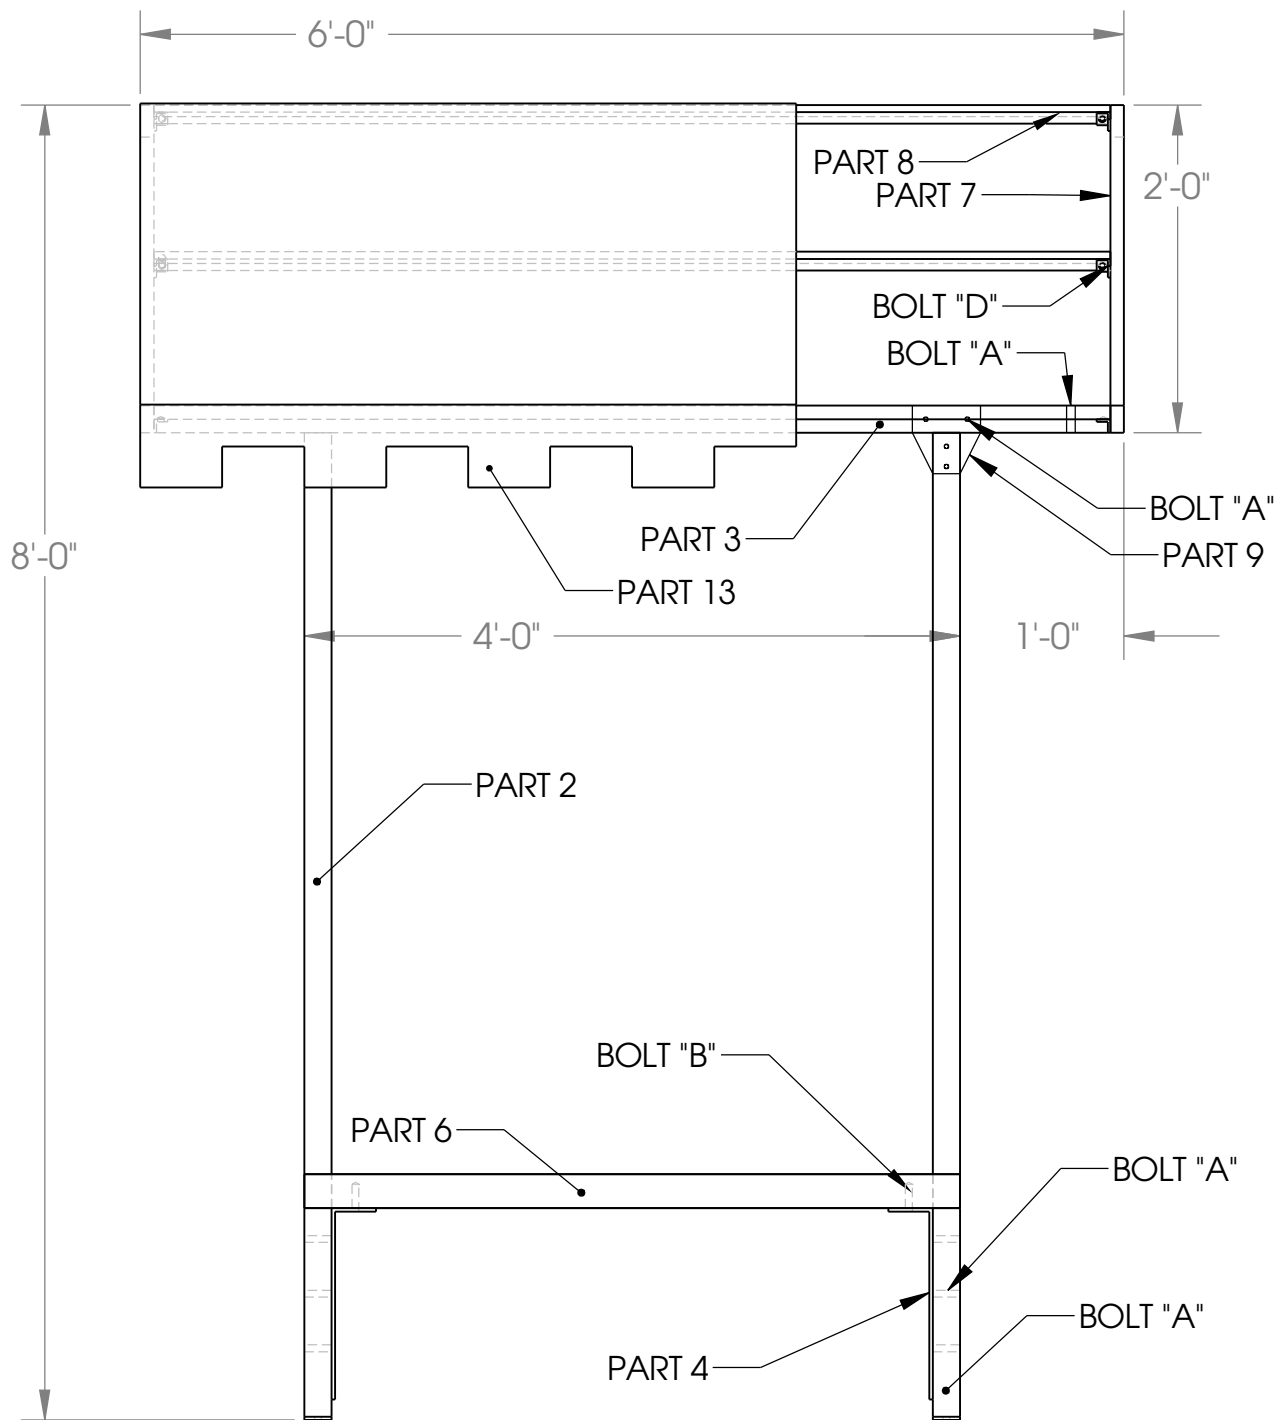

FRONT VIEW

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SUNTRENDS INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SUNTRENDS INC. IS
PROHIBITED.


SunTrends, Inc.

P.O. BOX 101057
DENVER, CO 80250
303-744-2647

SCALE 1:14

SHEET 2 OF 5

Cabana Bench Modified 6' - Direct Burial

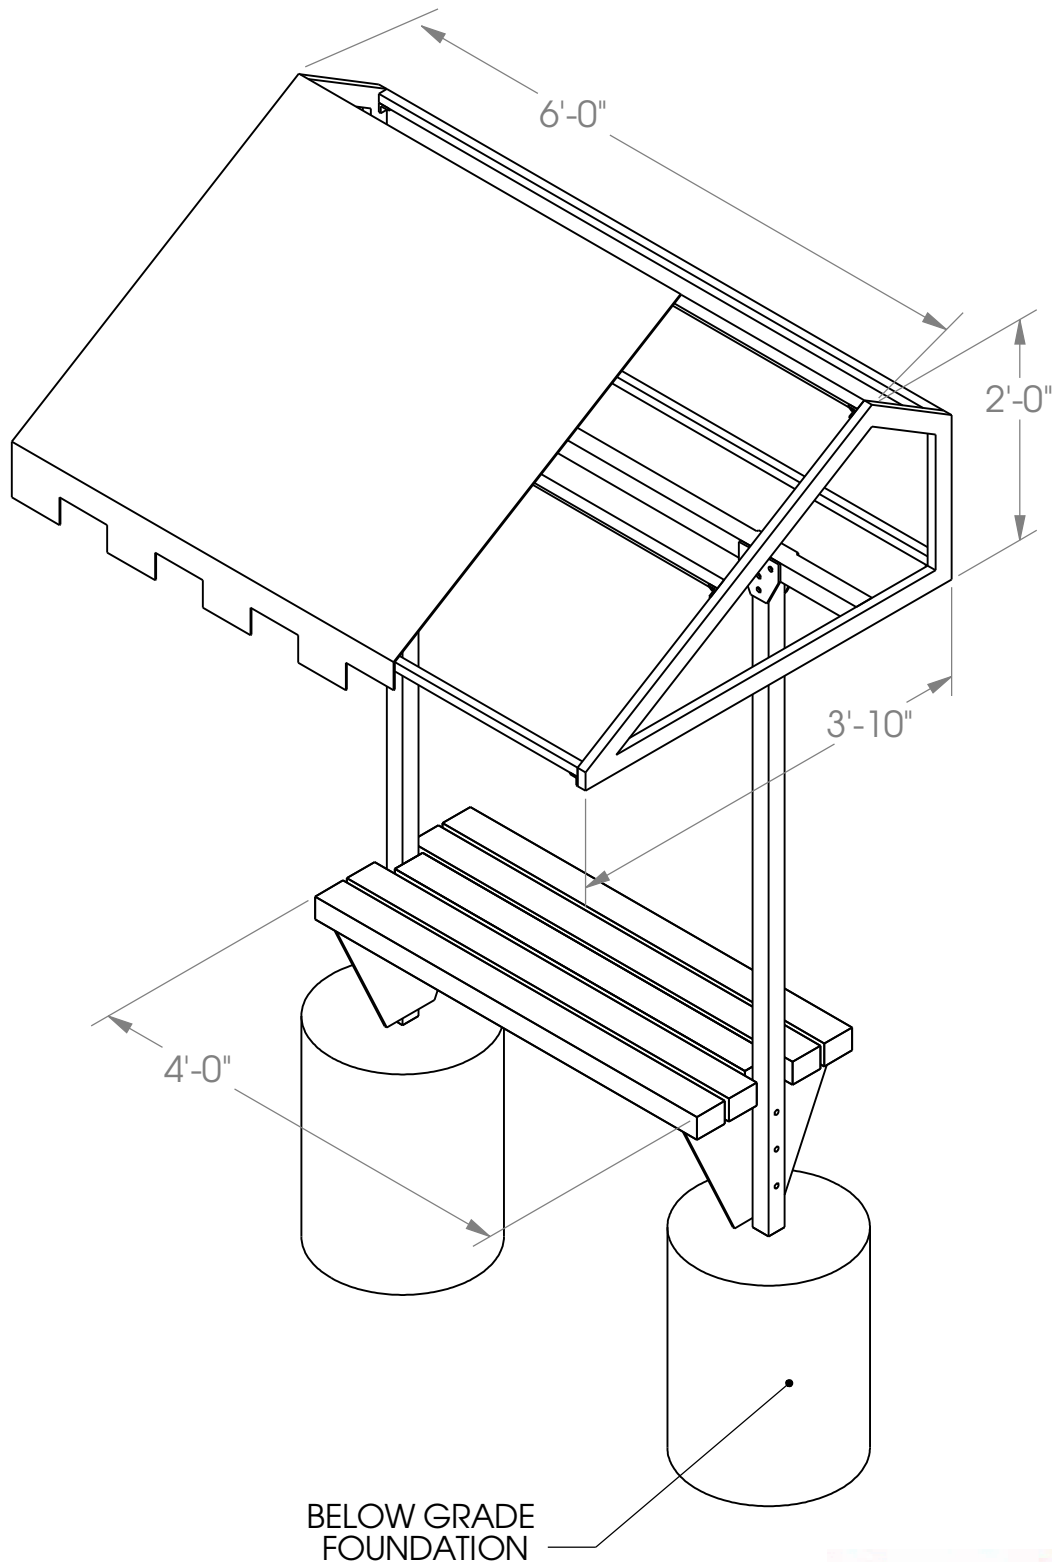

ISOMETRIC VIEW

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SUNTRENDS INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SUNTRENDS INC. IS
PROHIBITED.


SunTrends, Inc.

P.O. BOX 101057
DENVER, CO 80250
303-744-2647

SCALE 1:16

SHEET 1 OF 5

Cabana Bench Modified 6' - Direct Burial

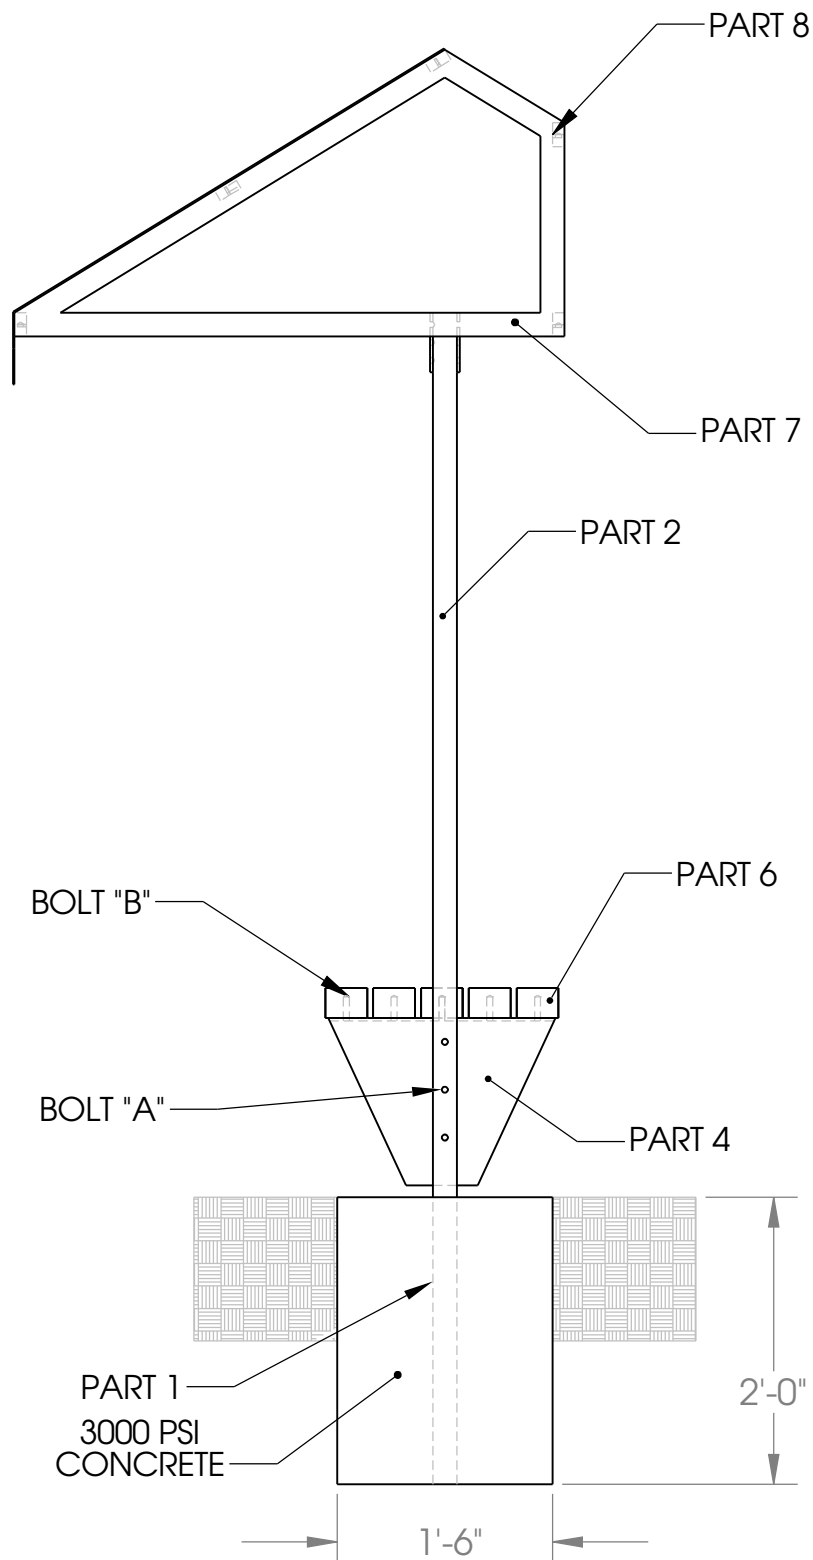

SIDE VIEW


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SUNTRENDS INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SUNTRENDS INC. IS
PROHIBITED.

SunTrends, Inc.


P.O. BOX 101057
DENVER, CO 80250
303-744-2647

SCALE 1:16

SHEET 3 OF 5

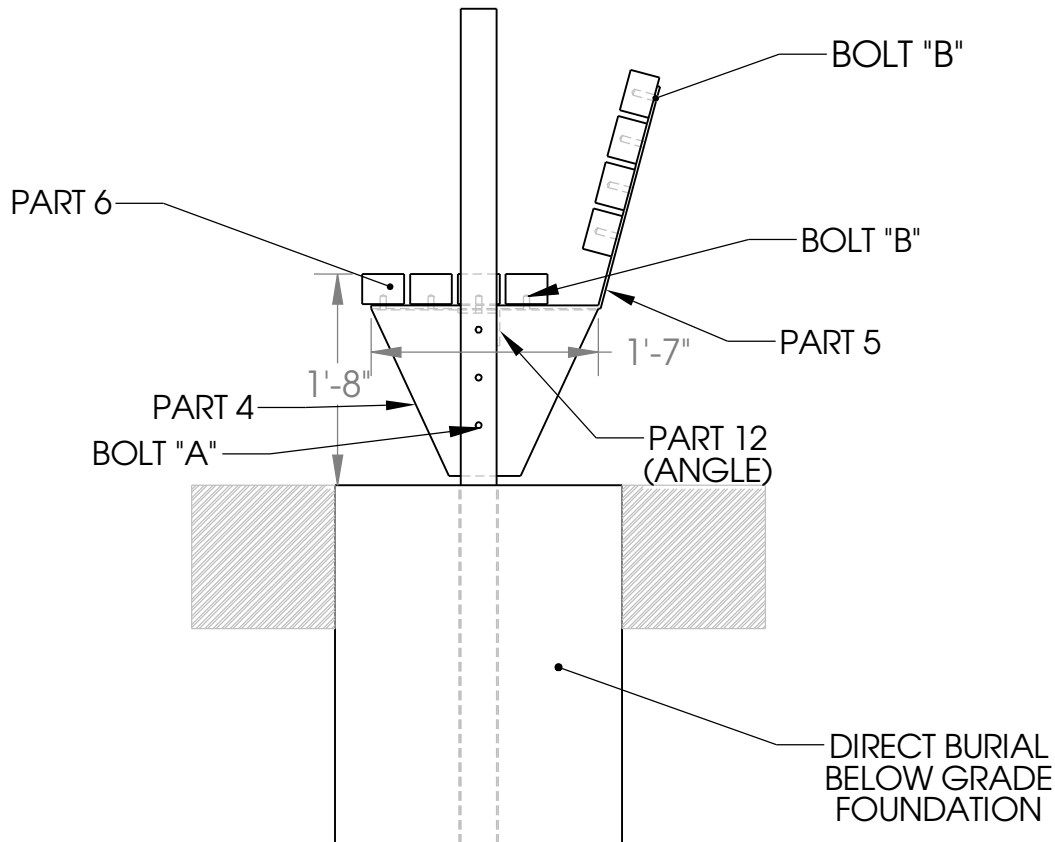

BACKREST BENCH - OPTIONAL
(1/16 SCALE)

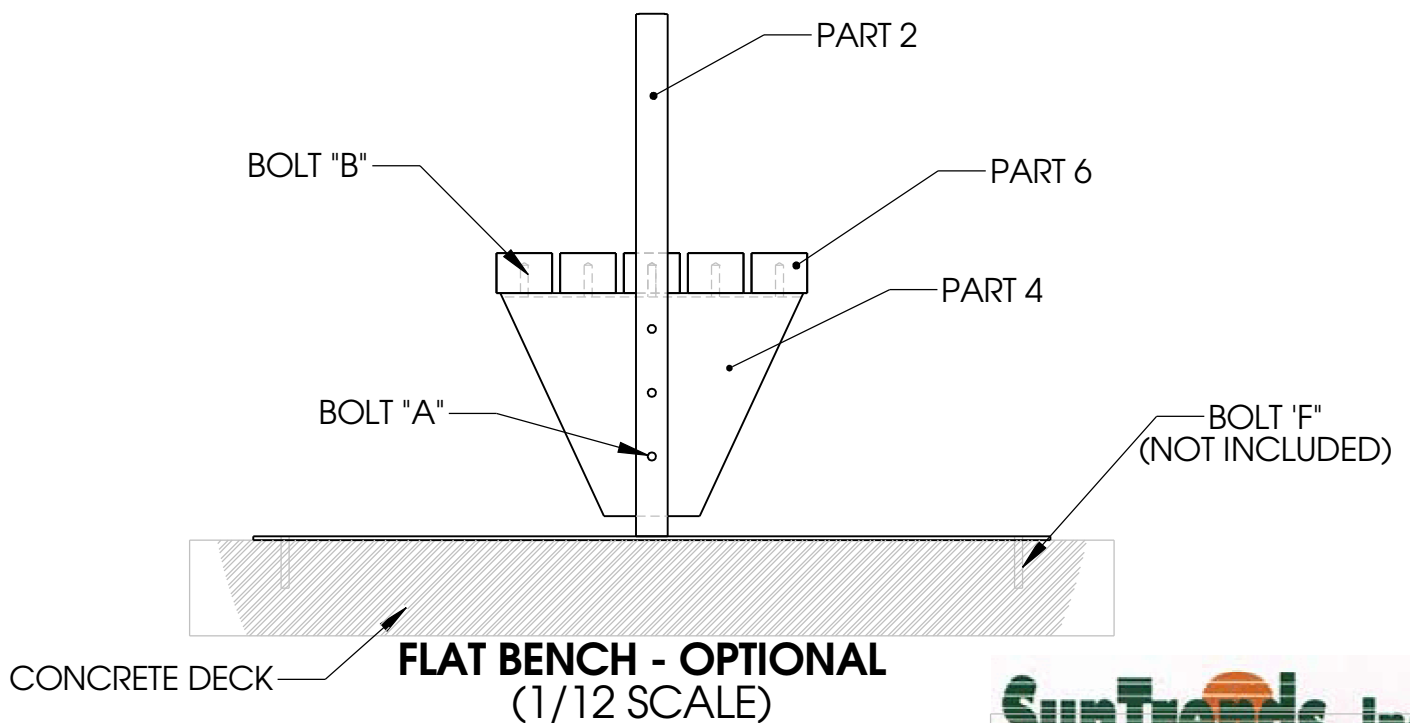

FLAT BENCH - OPTIONAL
(1/12 SCALE)

SunTrends, Inc.

P.O. BOX 101057
DENVER, CO 80250
303-744-2647

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SUNTRENDS INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SUNTRENDS INC. IS
PROHIBITED.

Installation Guidelines

Cabana Bench 6'-Surface Mount

Tools Needed: Ratchet set or wrenches.

Step 1: Posts and Beam

Insert posts (Part #2) into surface mount legs (Part #14) and secure with bolts "A". Place beam (Part #3) on top of posts making sure bolt holes line up. Secure with bolts "A."

Step 2: Seat Plates

Attach the (2) seat plates (Part #4) to the inside face of the posts (Part #2) with bolts "A".

Step 3: Durawood Bench Slats

Attach (5) 3" x 4" Durawood bench slats (Part #6) to seat plate (Part #4) with bolt "B".

*****OPTIONAL BACK REST BENCH**

Alternate Step 3: Durawood Bench Slats

Sandwich the bent bench straps (Part #5) between seat plates (Part #4) and Durawood slats (Part #6) and secure with lag bolts "B".

Step 4: Gable Ends

Attach gable ends (Part #7) to each end of beam (Part #3) with bolts "C".

Step 5: Perlins

Attach (5) perlins (Part #8) to gable ends with bolts "D".

Step 8: Fabric Canopy

1. Unfold canvas (Part #13) and drape it over the canopy frame. (The grommetted lacers are on the inside of the cover).
2. Pull the cover down over the corners making sure the canvas is square with the frame and wrinkles are pulled taut.
3. Starting at the center of the short sides (where the beam and gable meet) lace the rope through the grommets, working toward the other end. Pull the cover and rope tight as you work toward the other end. Tie off loose ends.

Step 7: Miscellaneous

Use can of black spray paint (semi gloss, not included) to touch up scratches from shipping or erection.

Optional: Secure surface mount legs to concrete deck with bolts "E" (not included)

Installation Guidelines

Cabana Bench 6'-Direct Burial

Tools Needed: Ratchet set or wrenches, hand level, shovels, wheel barrows.

Step 1: Foundation Excavation (Direct Burial)

Excavate holes on level ground for foundation of 1'-6" diameter by 2'-6" deep. Holes spaced at 3'-9" to center of each hole. Place approximately 6" of gravel in holes to an elevation of 2'0" deep. (Gravel used to support posts at desired elevation while concrete is being poured and to drain post sleeves.

Step 2: Posts and Beam

Slide 2"x2" sleeves (part #1) on to posts (part #2) and place beam (part #3) on top of posts making sure bolt holes line up. Secure with bolts "A."

Step 3: Foundation Placement

Set posts and beam on top of gravel base. Check the elevation to insure proper depth of posts. While plumbing posts vertically with a hand level, posts and beam need to be secured in place, using guy ropes or 2"x4" braces. Ropes need sufficient tautness to insure stability while pouring concrete. Concrete may then be poured, taking care not to move posts. Re-check the plumb after pouring concrete.

NOTE: Concrete needs 24 hours of curing time, prior to erecting rest of bench.

Step 4: Seat Plates

Attach the (2) seat plates (Part #4) to the inside face of the posts (Part #2) with bolts "A".

Step 5: Durawood Bench Slats

Secure (5) 3" x 4" Durawood bench slats (Part #6) to seat plate (Part #4) with bolt "B".

*****OPTIONAL BACK REST BENCH**

Alternate Step 5: Durawood Bench Slats

Sandwich the bent bench straps (Part #5) between seat plates (Part #4) and Durawood slats (Part #6) and secure with lag bolts "B".

Step 6: Gable Ends

Attach gable ends (Part #7) to each end of beam (Part #3) with bolts "C".

Step 7: Perlins

Attach (5) perlins (Part #8) to gable ends with bolts "D".

Step 8: Fabric Canopy

1. Unfold canvas (Part #13) and drape it over the canopy frame. (The grommetted laces are on the inside of the cover).
2. Pull the cover down over the corners making sure the canvas is square with the frame and wrinkles are pulled taut.
3. Starting at the center of the short sides (where the beam and gable meet) lace the rope through the grommets, working toward the other end. Pull the cover and rope tight as you work toward the other end. Tie off loose ends.

Step 9: Miscellaneous

Use can of black spray (semi gloss) paint to touch up scratches from shipping or erection.

PART AND BOLT SCHEDULE - MODIFIED CABANA 6' -SURFACE MOUNT

NUMBER	QUANTITY	DESCRIPTION
2	2	1.1/2" SQ. STEEL TUBE COLUMN
3	1	1.1/2" SQ. STEEL TUBE BEAM
4	2	STEEL SEAT PLATE
6	5	3" X 4" NOMINAL DURAWOOD PLASTIC SLATS
7	2	GABLE END FRAME
8	5	1" SQ. STEEL TUBE PURLINS
13	1	FABRIC CANOPY
14	2	SURFACE MOUNT LEG
"A"	14	3/8" X 2.1/2" HEX HEAD BOLT W/ NUT & WASHER
"B"	10	3/8" X 2.1/2" HEX HEAD LAG SCREW W/ WASHER
"C"	8	3/8" X 1" HEX HEAD BOLT W/ NUT & WASHER
"D"	10	1/4" X 1.1/2" HEX HEAD BOLT W/ NUT & WASHER
"F"	4	1/2" X 3.1/2" EXPANSION BOLT (OPTION) NOT INCL.

PART AND BOLT SCHEDULE - MODIFIED CABANA 6' -DIRECT BURIAL

NUMBER	QUANTITY	DESCRIPTION
1	2	2" SQ. STEEL TUBE SLEEVE
2	2	1.1/2" SQ. STEEL TUBE COLUMN
3	1	1.1/2" SQ. STEEL TUBE BEAM
4	2	STEEL SEAT PLATE
6	5	3" X 4" NOMINAL DURAWOOD PLASTIC SLATS
7	2	GABLE END FRAME
8	5	1" SQ. STEEL TUBE PURLINS
13	1	FABRIC CANOPY
"A"	10	3/8" X 2.1/2" HEX HEAD BOLT W/ NUT & WASHER
"B"	10	3/8" X 2.1/2" HEX HEAD LAG SCREW W/ WASHER
"C"	8	3/8" X 1" HEX HEAD BOLT W/ NUT & WASHER
"D"	10	1/4" X 1.1/2" HEX HEAD BOLT W/ NUT & WASHER
"F"	4	1/2" X 3.1/2" EXPANSION BOLT (OPTION) NOT INCL.