


## NET INSTALLATION

- 1) Stretch out the net across the court.
- 2) See if your winder post mechanism has a hook or a hole to accept the cable.
  - a) If it has a hook, use the cable as provided by attaching the loop to the hook.
  - b) If it has a hole, (internal mechanism), cut off the loop at one end of the cable.  
 Leave some excess in order to allow for several turns around the internal mechanism.  
 Now, insert the plain cable into the hole.
- 3) Attach the loop on the other end of the cable to the hook half way down the outside of the "dummy" post.
- 4) Crank up cable/net to 38" at center. DO NOT OVERWIND.
- 5) Attach the headband to posts with the rope provided.
- 6) Square up the net and lace it to the post using lacing cord provided. Most posts have lacing bars for easy installation. Use the side grommets on the net to accept the lacing cords. If the posts do not have lacing bars, you can lace around the posts.
- 7) Measure the height of the net in the center and adjust the center strap to make the net 36" at the center line of the courts. Your installation is now complete and your net should sit comfortable but somewhat tightly between the two posts with a very small gap between the net and posts.

**LACING NET  
WITH LACING  
RODS**

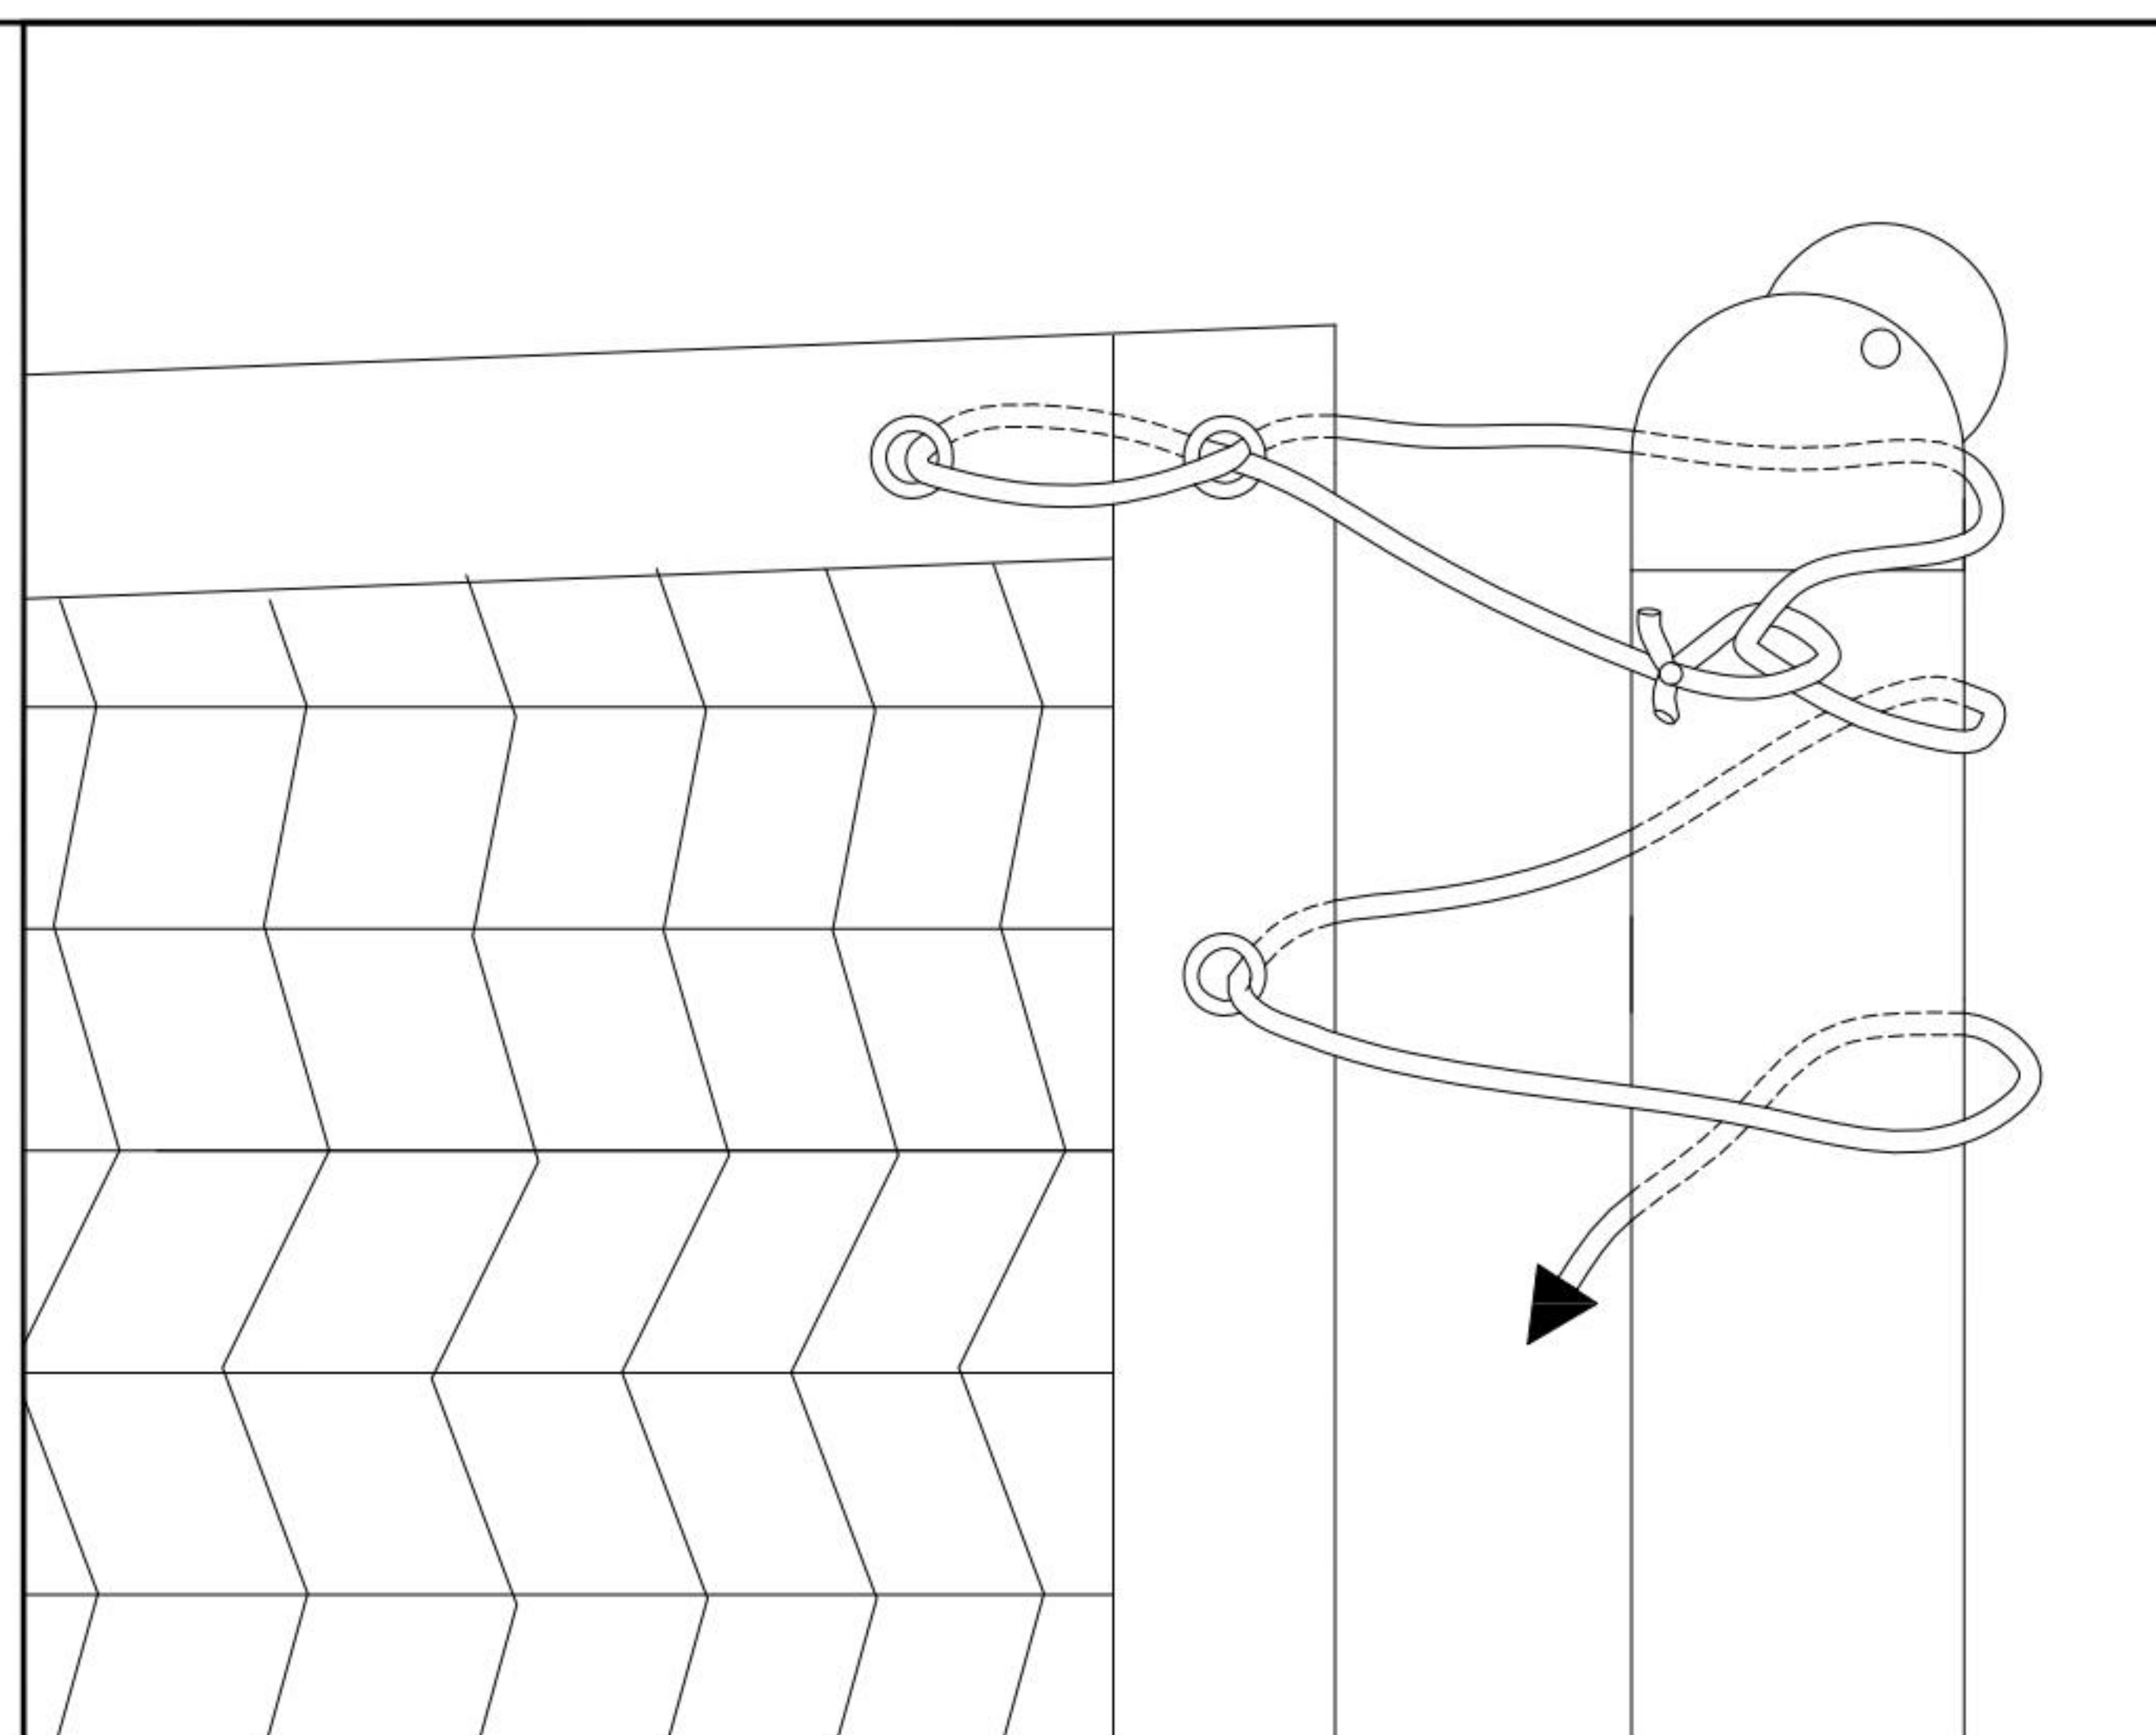

**LACING NET  
WITHOUT LACING  
RODS**

